


## BLD Series DC Brushless Driver Quick Start Instruction

Users can quickly start the motor operation in the following two ways.

## Run motor via SV potentiometers input


1. Connect the motor and controller according to the following diagram, and connect the power supply.

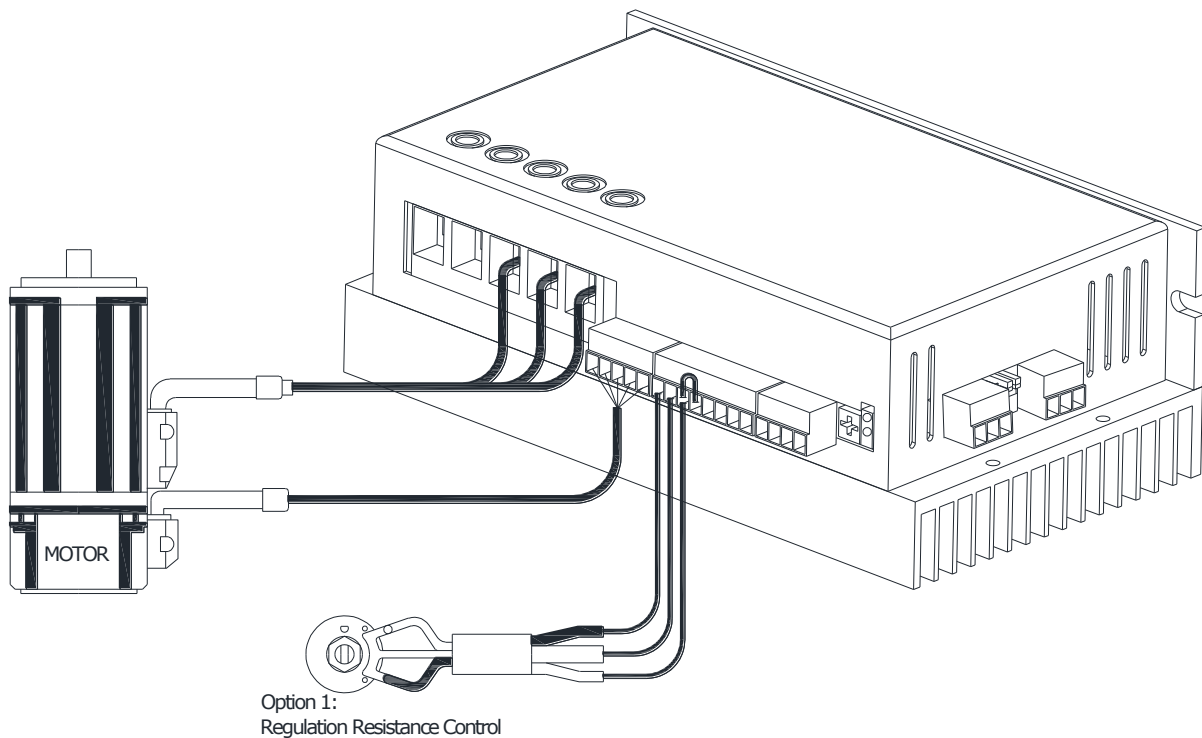

2. Short the X1 input to GND.
3. Control the motor via rotating potentiometers or inner RV potentiometers.

## Run motor via APP JOG

1. Connect the motor and controller according to the following diagram, and connect the power supply.

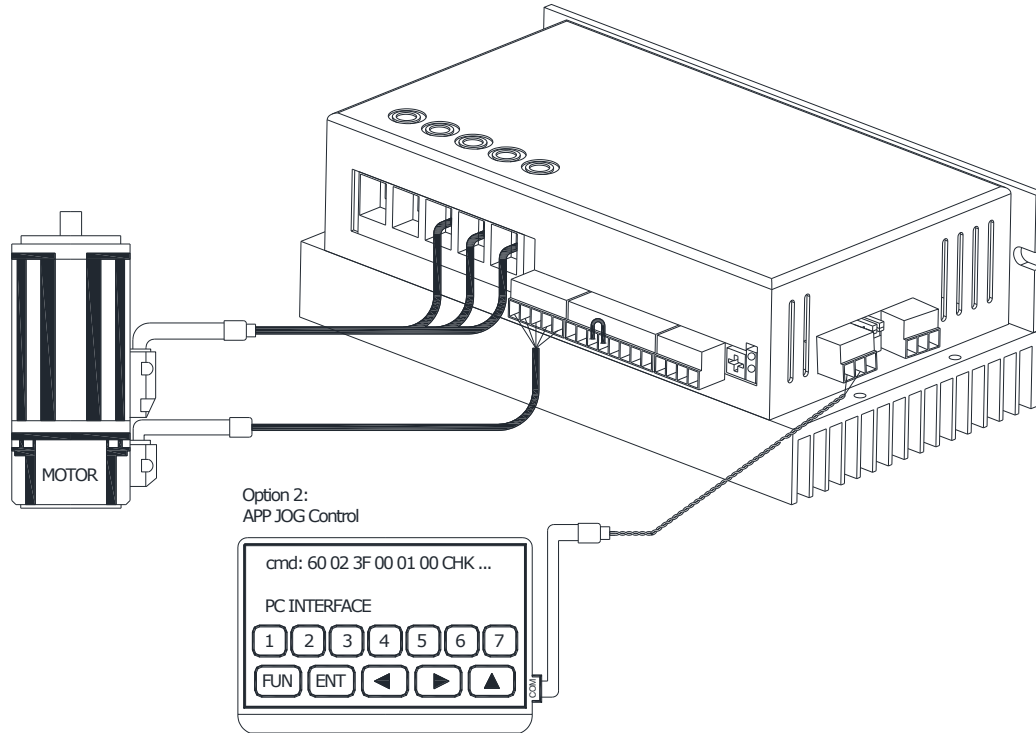

2. Connect the driver to PC via 485 communication tool.
3. Open APP, and communicate with driver.
4. Start the motor via setting PR120=1 , PR121=1 , PR125=200.

